


Installation Instructions

Dust container

408120 (en) 01-2024

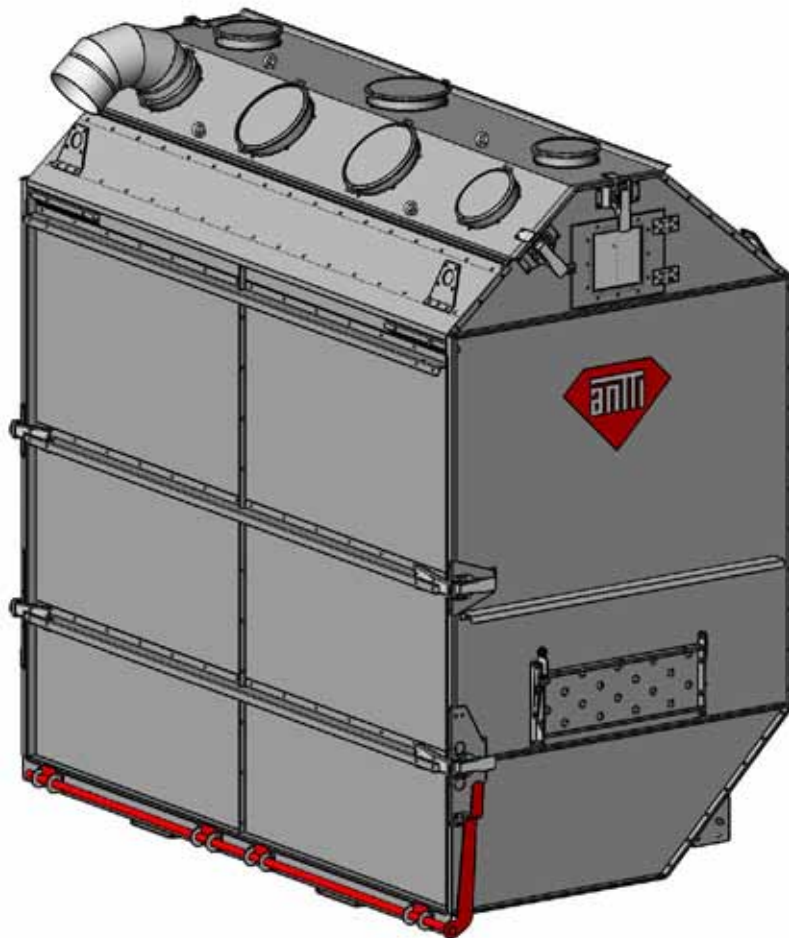

CONTENTS

| | |
|---|---|
| Dust container | 3 |
| Dimension drawing | 4 |
| Basic diagram of the dust collector and top cover lifting mechanism | 5 |
| Installing the forklift truck fork locks | 6 |
| GUARANTEE TERMS | 7 |
| EU Declaration of Conformity | 9 |



Dust container

The dust container is intended as a container for the debris from dust collectors.

The top cover can be easily removed by opening the latches. By slightly raising the cover while the pipes from the dust collectors are closed, the container can be pulled out from underneath.

The container has a front loader adapter, 3-point lift attachment and forklift truck fork housings. Locking bars are included for using a forklift truck.


The lifting lugs on the dust container are for moving the container when empty.

Exhaust air is expelled through a connection in the top cover, and a curved air duct is installed in the D200 pipe joint. If necessary, inspection hatches can be used for air extraction.


The unloaded weight with the top cover and accompanying accessories is 540 kg,
The weight of the container without the top cover is 490 kg.
The maximum permissible total weight is 2,000 kg.



Dimension drawing

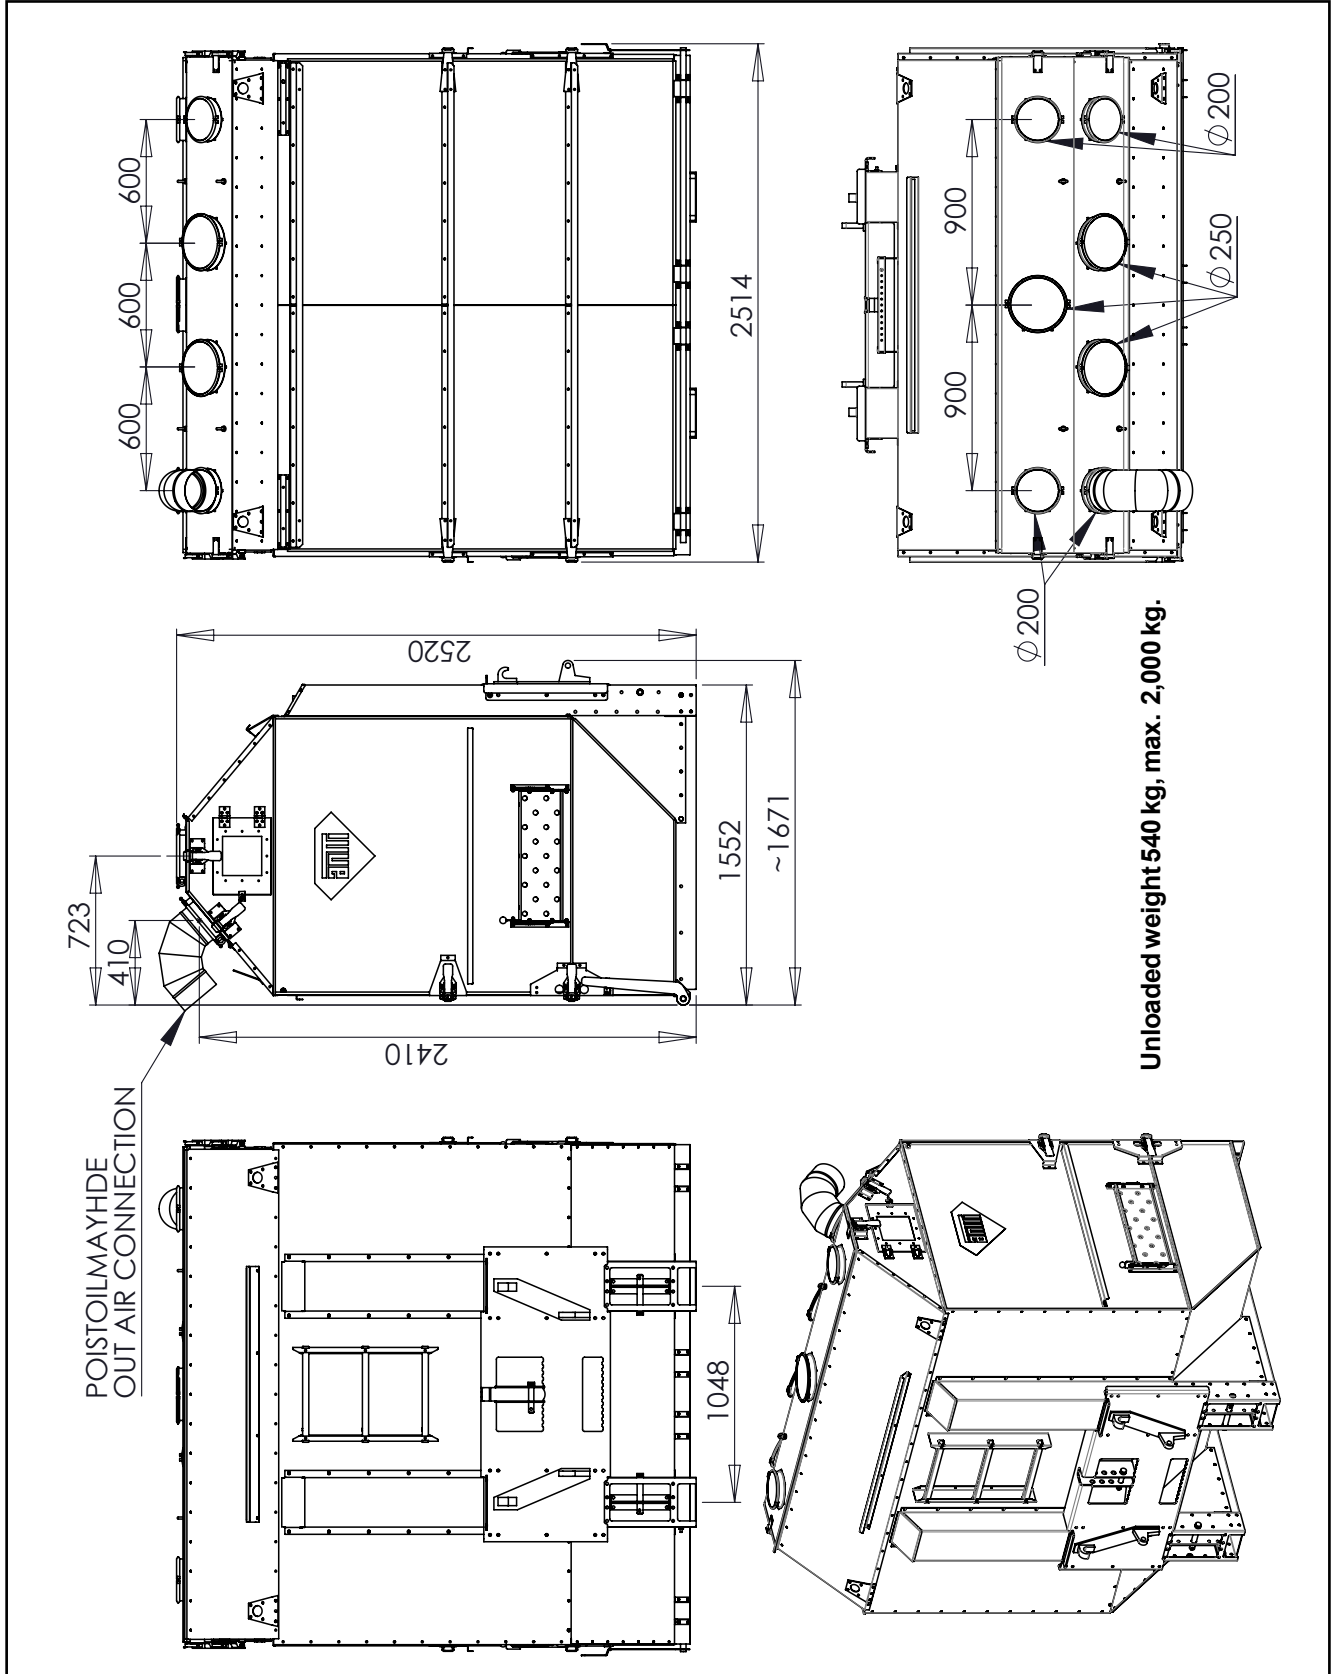


Basic diagram of the dust collector and top cover lifting mechanism

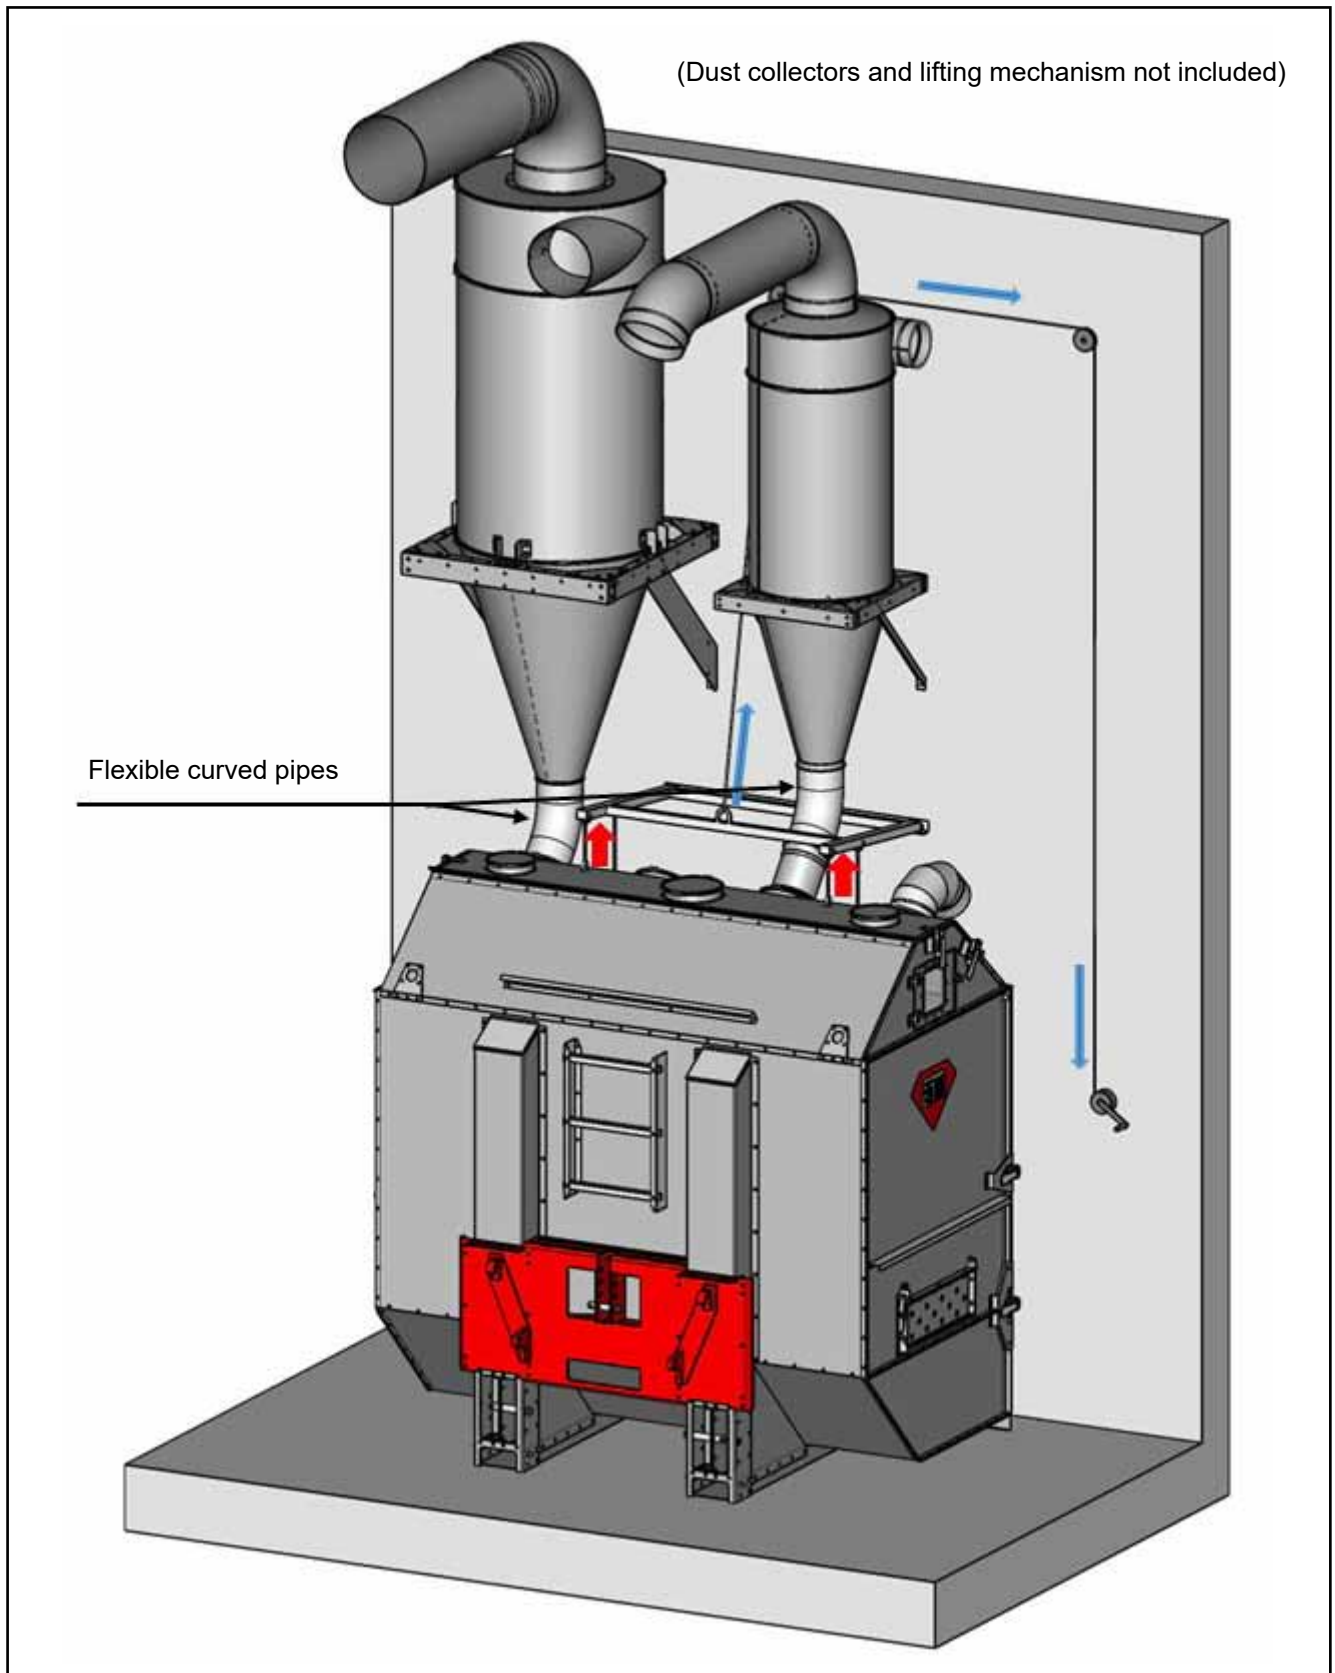



Installing the forklift truck fork locks

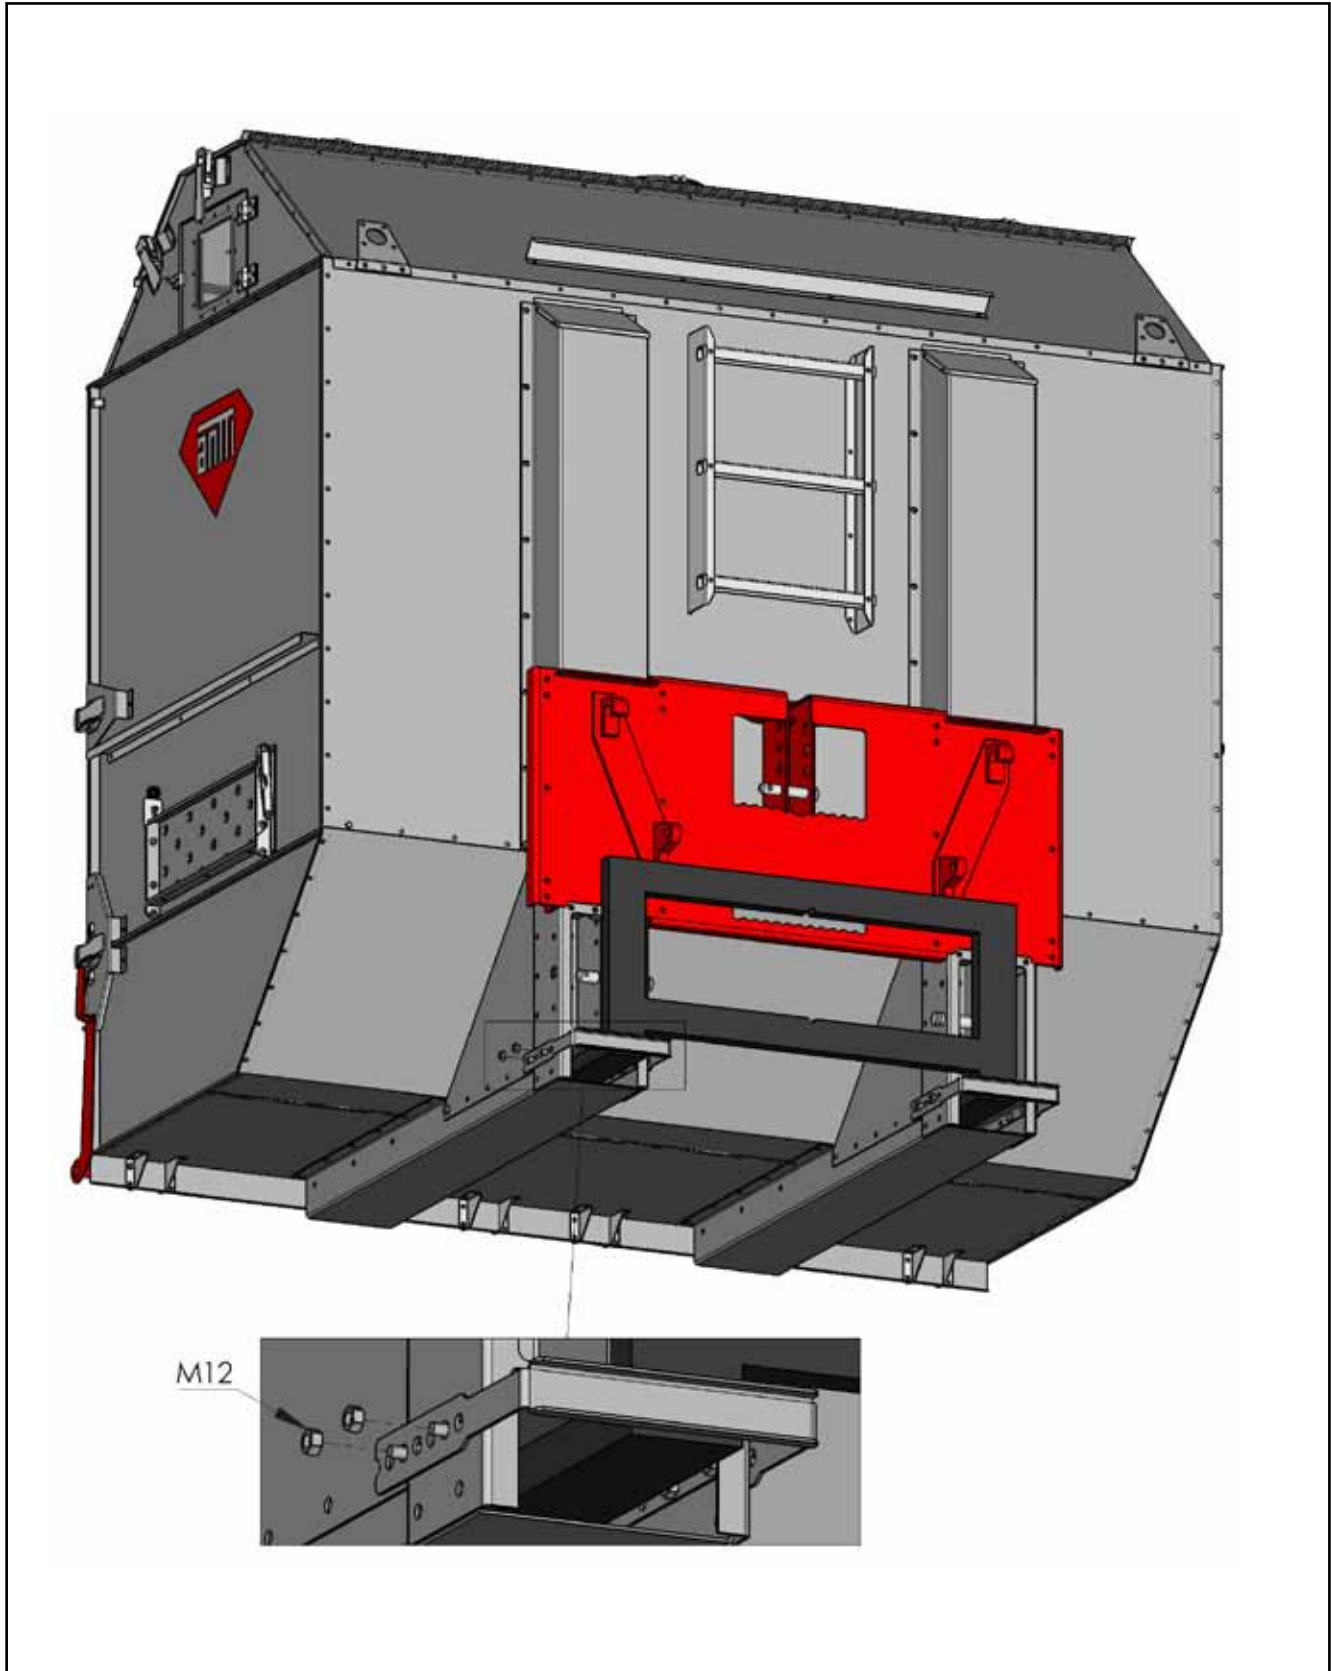



GUARANTEE TERMS

Antti-Teollisuus Oy guarantees all the products manufactured by the company, subject to the following terms:

1. The guarantee period lasts for one year starting from the date of delivery from the factory; and in any case, at least one harvest season.
2. The guarantee covers defects in material and workmanship observed during the guarantee period.
3. The instructions given by the manufacturer and the valid regulations have been followed during assembly, operation and servicing.
4. The manufacturer is not responsible for any guarantee or commitment that the distributor may have granted.

Compensation under the guarantee

The guarantee covers repair or replacement of faulty parts, as deemed appropriate by the manufacturer. The guarantee covers neither consequential losses caused by breakdown of the appliance nor the labour, travel or daily allowances which are incurred as a result of replacing any parts.

The guarantee does not cover the assembly and adjustment of the machinery.

Restrictions

Compensation under the guarantee will not be made in the following cases:

1. If the reason for the defect is normal wear, abnormal operating conditions, incorrect installation, inadequate servicing, carelessness or unintended use.
2. The defect has resulted from a thunderstorm, fire, flooding or any other external factor.
3. If the user has modified the appliance or attached additional equipment to it without the consent of the manufacturer, or if the pre-set fixed values of the limiting devices have been changed.

Claiming for compensation

1. The manufacturer and distributor must be notified of the defect in writing without delay.
2. The make, type and serial number, as well as the date of delivery/putting into operation of the machine, must be stated.
3. Upon request, the faulty part or appliance must be delivered to the guarantor without delay. If the part is not returned, the guarantor is entitled to invoice for the replacement part.





EU Declaration of Conformity

ANTTI-TEOLLISUUS OY
Koskentie 89
FIN-25340 KANUNKI
Tel.: +358 2 7744700

declares that

DUST CONTAINER

conforms with the provisions of the following directives:

- **Machine Directive 2006/42/EY**

Salo 02.01.2024

Kalle Isotalo
Managing Director